

GSM AUTO DAILER

User Manual

- 15 Mobile Numbers can be stored in the memory.
- Stored Mobile Numbers are Readable from Remote.
- 5 Simple SMS Command for Configuration.
- Recording Voice Message through Mobile Call.
- SMS Notification of input Status.
- Password Update through Keypad.
- Date / Time & Signal Strength in Home Screen.
- 2 Individual Voice Message with 20 Sec Rec Time.
- 3 Inputs are Supported.
- 1 Relay Output with the Option of Input Mapping.
- 12/24V Power Supply Compatibility.
- Only SMS Notification for Open and Close with Date/Time.
- Can be Integrated with Other Intrusion & Fire Panels.
- Instant Call/SMS Alert for Input Activated.
- Triggering External Relay through SMS.



3 Zones ,5 Line
Lcd Display



1 User
Password



Build In Battery
Provision



Mobile Call
Alerts



Arming/Disarming
through Mobile SMS



control Through
Android App




1 Electrical
Appliance
Control


Introduction

Our GSM Auto-Dialer is a Versatile Unit Which can be Attached in your Homes, Work, Gardens or Wherever you need it and It will Alert you Using GSM Technology and Send you a Text Message or Call you Straight to you Mobile Phone or Landline So you know Straight Away if there is Any Problem/Failure/Status Change.

Key Functions

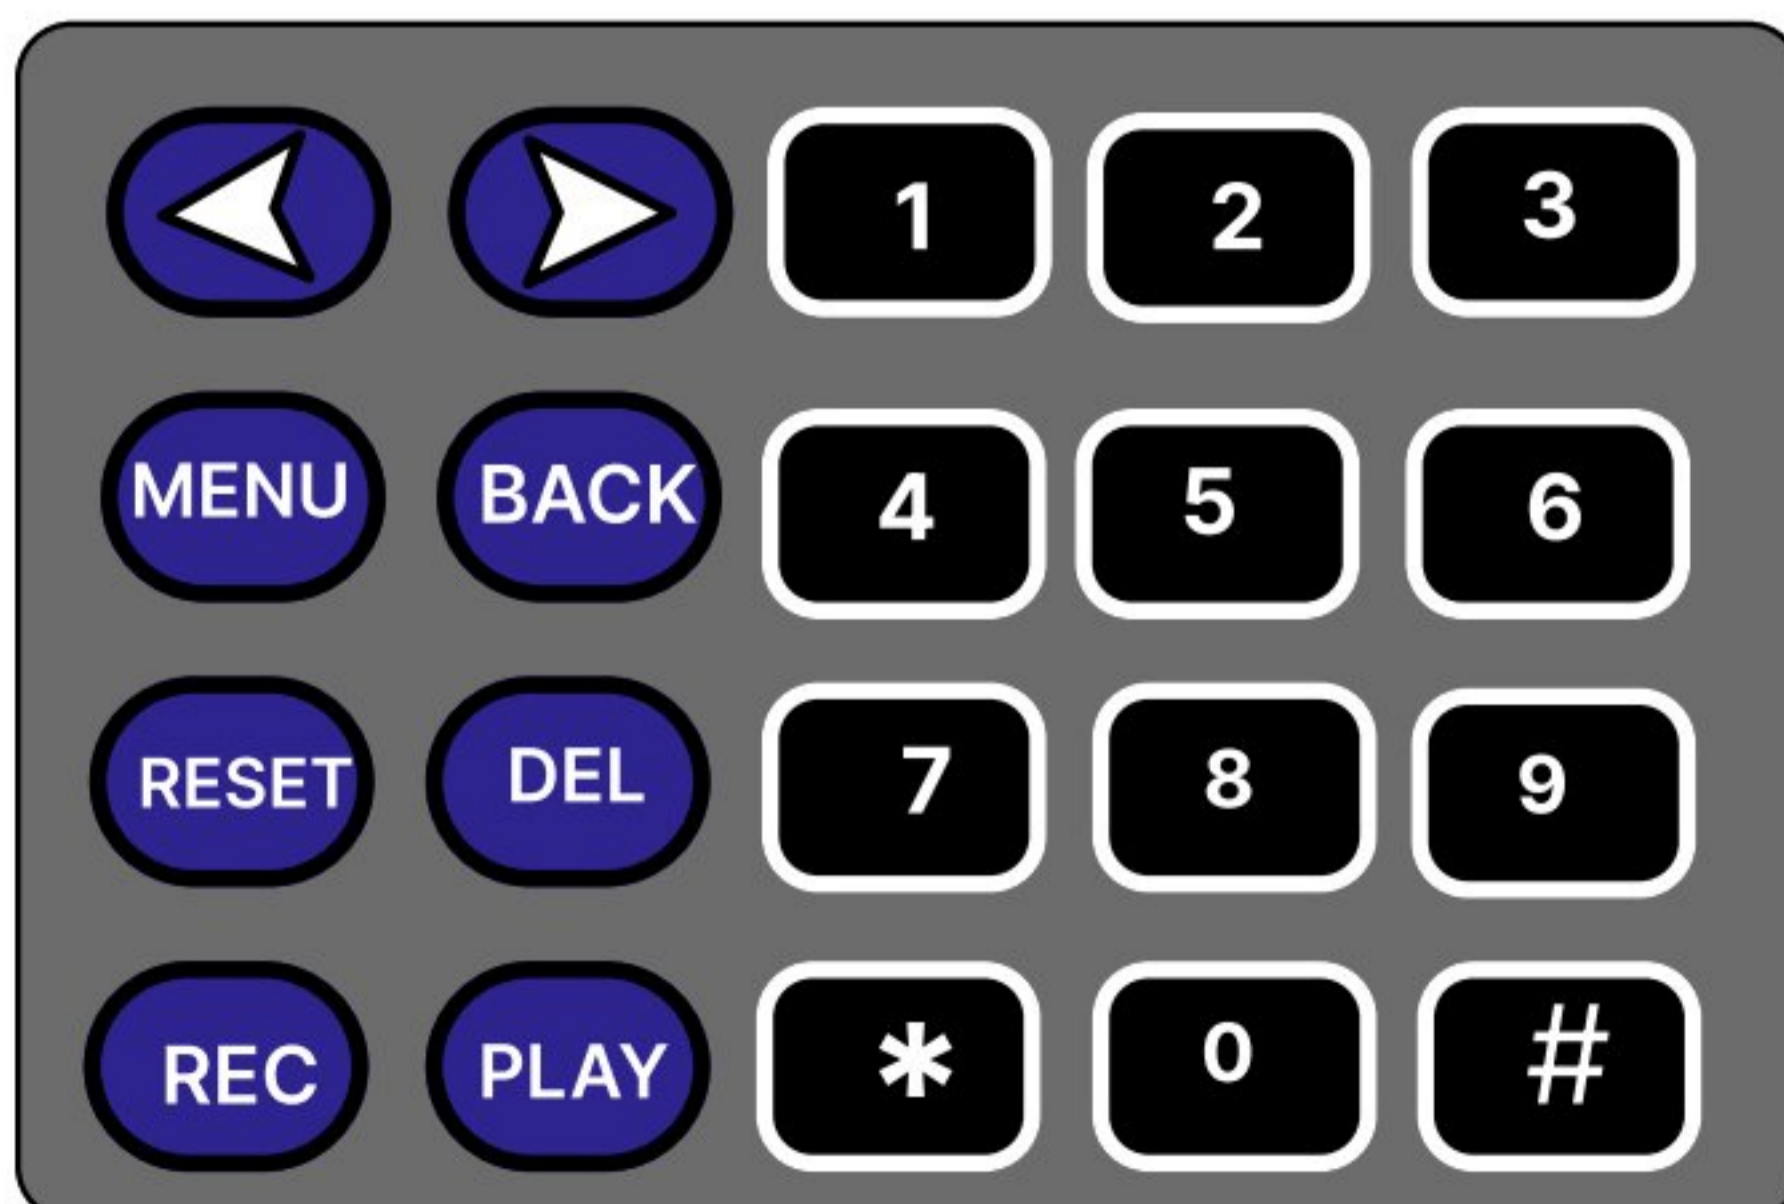

Operating Functions

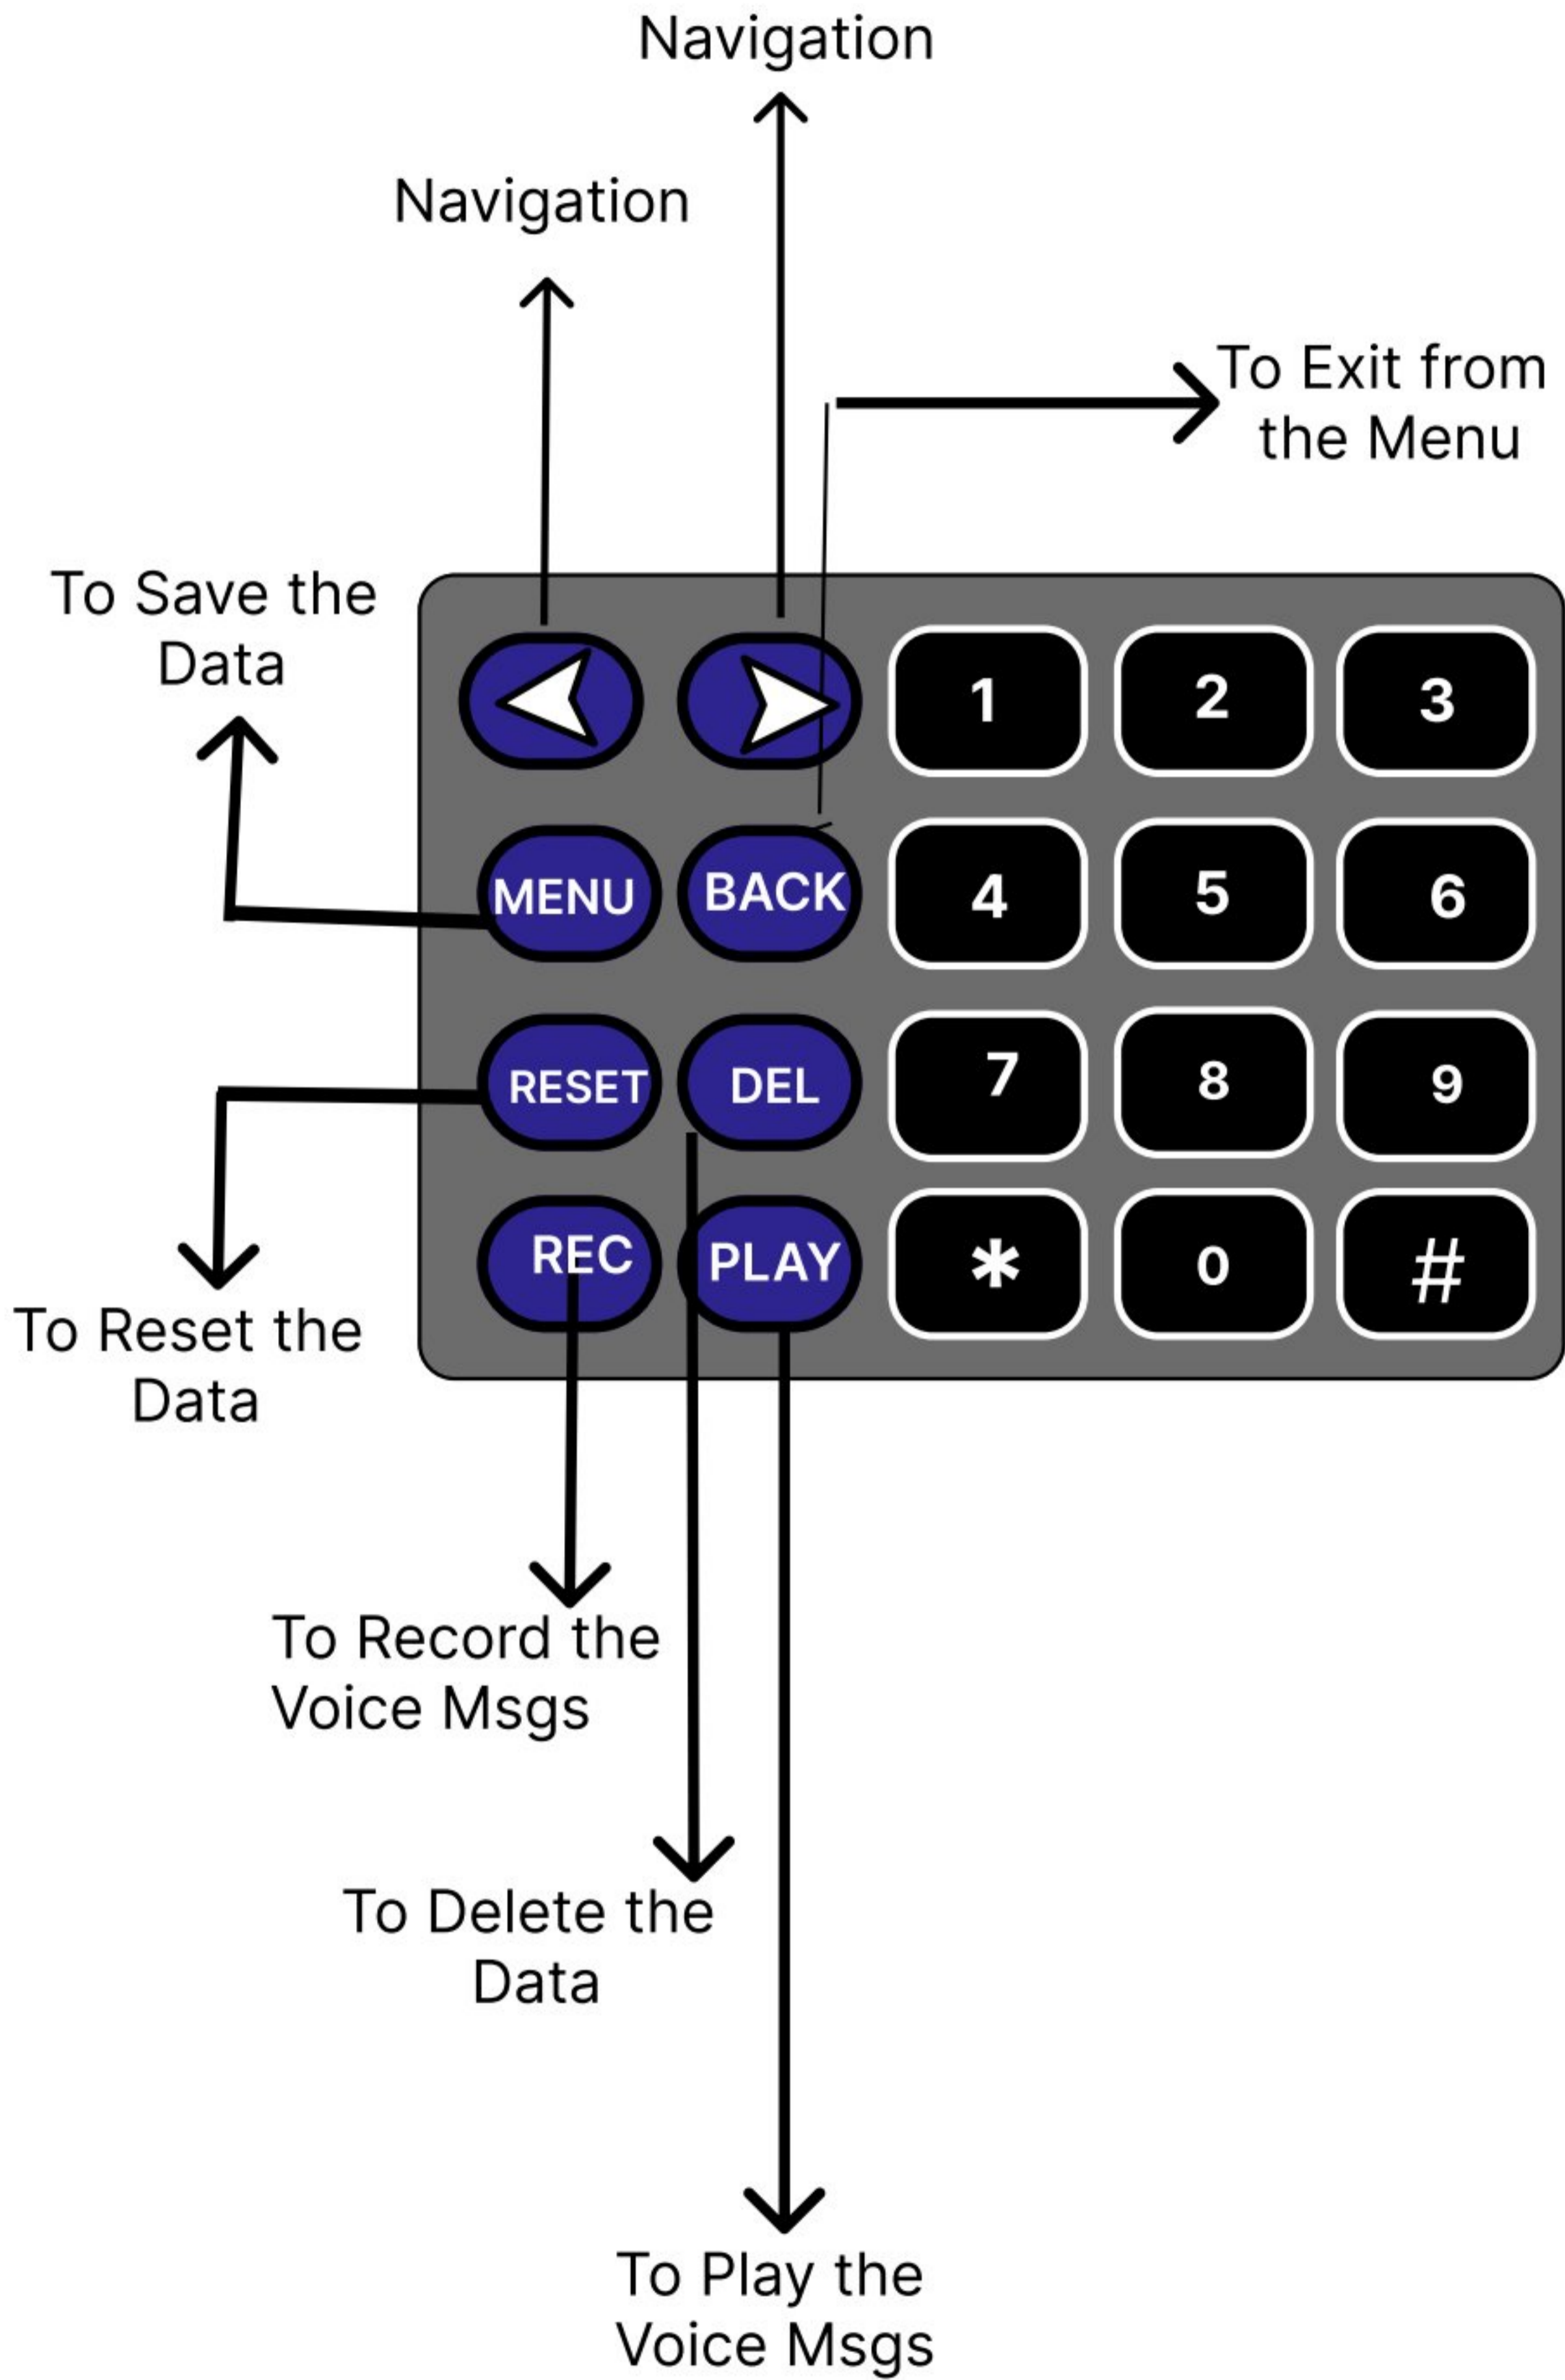

Password Entry

Enter Pin:
XXXX

- Press **ENTER** Key to Enter 4 Digit Password.

Zone Settings

Menu
<Zone Settings>

SubMenu
<Zone 1>

- Menu with Zone Settings is Displayed.
- Press **ENTER** Key. SubMenu in Zone Settings is Displayed. We have 3 Zones in SubMenu We Can Choose any Option.

Zone :ON/OFF

Zone 1
<ON/OFF>

Zone Mode
<ON>

Saved





- Press **ENTER** Key. Mode in Zone SubMenu is Displayed.
- Press **ENTER** Key. We have 2 Options to ON/OFF. Press **▶** Key to Choose the Option.
- Press **ENTER** Key. The Option Which We Chooosed Will get Saved.

Zone : Type

Zone 1
<Type>

Zone Type
<NC>

Saved





- Press  Key. Type in SubMenu is Displayed. Press  key.
- Press  Key. We have 2 Options to Choose NC,NO.
- Press  Key. The Option Which We Chooosed Will get Saved.

Zone : SELECT VMSG

Zone 1
<SELECT VMSG>

SELECT VMSG
<VMSG1>

Saved




- Press  Key. SELECT VMSG in SubMenu is Displayed. Press  Key.
- Press  Key. We have 2 Options to Choose VMSG1, VMSG2.
- Press  Key. The Option Which We Chooosed Will get Saved.

Zone : Location

Zone 1
<Location>

Zone Location
Enter the Data

Saved




- Press  Key. Location in SubMenu is Displayed. Press  Key.
- Enter the Location.
- Press  Key. The Option Which We Chooosed Will get Saved.

Zone:Notify Me

Zone 1
<Notify Me>

Notify Me
<Enable>

Saved

- Press  Key. Notify Me in SubMenu is Displayed.
- Press  Key. We have 2 Options to Choose Enable, Disable.
- Press  Key. The Option Which We Chooosed Will get Saved.

Password Entry

Enter Pin:
XXXX

- Press **ENTER** Key to Enter 4 Digit Password.

Dailer Settings

Menu
<Dailer Settings>

- Menu with Dailer Settings is Displayed.

SubMenu
<Phone Number>

- Press **ENTER** Key. SubMenu is Displayed. We have Phone Number, Voice Repeat, Call Retry Zones in SubMenu.

DS:Phone Number

SubMenu
<Phone Number>

- Press **ENTER** key. If We Choose Phone Number as SubMenu.

<Phone No:1>
XXXXXXXXXX

- Press **ENTER** key. In this Menu We Can Enter 15 Phone Number's. Press **ENTER** key to Enter the Phone Number.

Saved





- Press **ENTER** Key. The Option Which We Chosed Will get Saved.

DS:Voice Repeat

SubMenu
<Voice Repeat>

Set V Repeat
<1>

Saved





- Press  Key. Voice Repeat in SubMenu is Displayed. Press  Key.
- Press  Key. We have 3 Options to Choose 1,2,3 Voices.
- Press  Key. The Option Which We Chooosed Will get Saved.

DS:Call Retry

SubMenu
<Call Retry>

Set Call Retry
<1>

Saved


- Press  key. Call Retry in SubMenu is Displayed. Press  Key.
- Press  Key. We have 3 Options to Choose 1,2,3.
- Press  Key. The Option Which We Chooosed Will get Saved.

Time/Date

Enter Pin:
XXXX

Menu
<Time/Date>

SubMenu
<Time>

- Press **ENTER** Key to Enter 4 Digit Password. Press  Key Menu with Time/Date is Displayed.
- Press **ENTER** Key. SubMenu is Displayed. We have Time/Date.

T/D:Time

<Time>
00:00:00

HH:MM:SS
00:00:00

Saved

- Press **ENTER** Key. If We Choose Time as SubMenu.
- Press **ENTER** Key. In this Menu We have HH:MM:SS Format.
- Press **ENTER** Key. The Option Which We Chosed Will get Saved.

T/D:Date

<Date>
00:00:00

MM:DD:YY
00:00:00

Saved

- Press **ENTER** Key.If We Choose Date as SubMenu.
- Press **ENTER** Key.In this Menu We have MM:DD:YY Format.
- Press **ENTER** Key. The Option Which We Choused Will get Saved.


T/D:NW Time Sync

Nw Time Sync
<Enable>

Saved

- Press **▶** Key.We have 2 Options to Choose Enable,Disable.
- Press **ENTER** Key. The Option Which We Choused Will get Saved.

Password Entry

A screenshot of a screen with a light gray background and a black border. The text "Enter Pin:" is centered at the top, and "XXXX" is centered below it.

Enter Pin:
XXXX


- Press **ENTER** Key to Enter 4 Digit Password.

Pin Change

A screenshot of a screen with a light gray background and a black border. The text "Menu" is centered at the top, and "<Pin Change>" is centered below it.


Menu
<Pin Change>

- Menu with Pin Change is Displayed.

A screenshot of a screen with a light gray background and a black border. The text "Enter Old Pin" is centered at the top, and "XXXX" is centered below it.

Enter Old Pin
XXXX

- Press **ENTER** Key and Enter the Old Pin.

A screenshot of a screen with a light gray background and a black border. The text "Enter New Pin" is centered at the top, and "XXXX" is centered below it.

Enter New Pin
XXXX


- Press **ENTER** Key and Enter the New Pin.

A screenshot of a screen with a light gray background and a black border. The text "Pin Changed" is centered on the screen.

Pin Changed

- Press **ENTER** Key. The Option Which We Chooosed Will get Saved.

Password Entry

A screenshot of a mobile phone screen showing a password entry prompt. The text reads "Enter Pin:" followed by "XXXX" on the next line. The text is centered within a light gray rectangular box with a black border.

Enter Pin:
XXXX

- Press **ENTER** Key to Enter 4 Digit Password.

Welcome Note

A screenshot of a mobile phone screen showing a menu. The text reads "Menu" followed by "<Welcome Note>" on the next line. The text is centered within a light gray rectangular box with a black border.

Menu
<Welcome Note>

A screenshot of a mobile phone screen showing a prompt to enter a note. The text reads "Enter the Note" centered within a light gray rectangular box with a black border.


Enter the Note

A screenshot of a mobile phone screen showing a confirmation message. The text reads "Saved" centered within a light gray rectangular box with a black border.

Saved

- Menu with Welcome Note is Displayed.
- Press **ENTER** Key and Enter the Data.
- Press **ENTER** Key. The Option Which We Choused Will get Saved.

Password Entry



Enter Pin:
XXXX

- Press **ENTER** Key to Enter 4 Digit Password.

Balance Check



Menu
<Balance Check>




Enter USSD Num:



Saved

- Menu with Balance Check is Displayed.
- Press **ENTER** Key and Enter the Number.
- Press **ENTER** Key. The Option Which We Choused Will get Saved.

Password Entry



Enter Pin:
XXXX

- Press  Key to Enter 4 Digit Password.

Back Light






Menu
<Back Light>



Back Light
<1Min>



Saved

- Menu with Back Light is Displayed.
- Press  Key and We have 2 Option Default 1Min,Always. Press  Key to Select.
- Press  Key. The Option Which We Choused Will get Saved.

Password Entry

Enter Pin:
XXXX

- Press **ENTER** Key to Enter 4 Digit Password.

Chime Settings

Menu
<Chime Settings>

SubMenu
<key Chime>

- Menu with Chime Settings is Displayed.
- Press **ENTER** Key. SubMenu Is Displayed. We have 2 Option Key Chime, Config Chime to Choose Any Option.

CS:Key Chime


SubMenu
<Key Chime>

Key Chime
<Enable>

Saved

- Press **ENTER** Key. Key Chime is Displayed.
- Press **ENTER** Key. We have 2 Options to Enable, Disable. Press **▶** Key to Choose the Option.
- Press **ENTER** Key. The Option Which We Choused Will get Saved.

CS:Config Chime

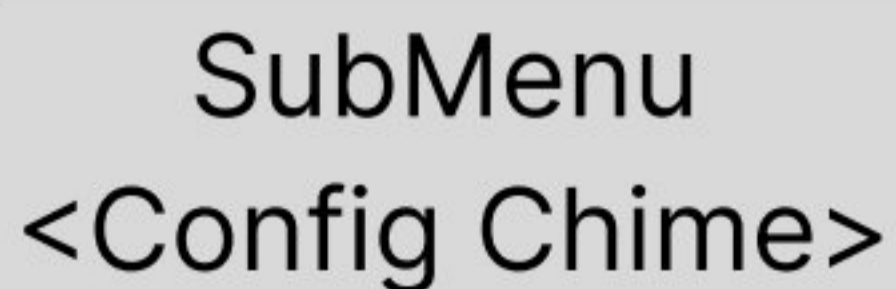

SubMenu
<Config Chime>



Config Chime
<Enable>



Saved

- Press **ENTER** Key. Config Chime is Displayed.
- Press **ENTER** Key. We have 2 Options to Enable, Disable. Press **▶** Key to Choose the Option.
- Press **ENTER** Key. The Option Which We Chosed Will get Saved.

Password Entry

Enter Pin:
XXXX

- Press **ENTER** Key to Enter 4 Digit Password.

Relay Config

Menu
<Relay Config>

SubMenu
<TRIGCONTROL>

- Menu with Relay Config is Displayed.
- Press **ENTER** Key. SubMenu TRIGCONTROL IS Displayed.


RC:TRIGCONTROL

TRIGCONTROL
<All Zones>

Saved

- Press **ENTER** Key and We have TRIGCONTROL in Which We have All Zones, Zone 1, Zone 2, Zone 3, Zone 4, Zone 5, SMS. Press **▶** Key to Select.
- Press **ENTER** Key. The Option Which We Chooosed Will get Saved.

Password Entry




Enter Pin:
XXXX

- Press **ENTER** Key to Enter 4 Digit Password.


Factory Reset



Menu
<Factory Reset>



Enter Pin
XXXX



Re-Enter Pin
XXXX



FactResetting



Done

- Menu with Factory Reset is Displayed.
- Press **ENTER** Key and Enter the Pin.
- Press **ENTER** Key .Re-Enter the Pin.
- Press **ENTER** key.

DIODETRONIX

+91 87789 04263

www.diodetronix.com | info@diodetronix.com

#5, Ganesh Nagar, Sholinganallur, Chennai - 600 119.

THANK YOU